 


WHAT'S INCLUDED:

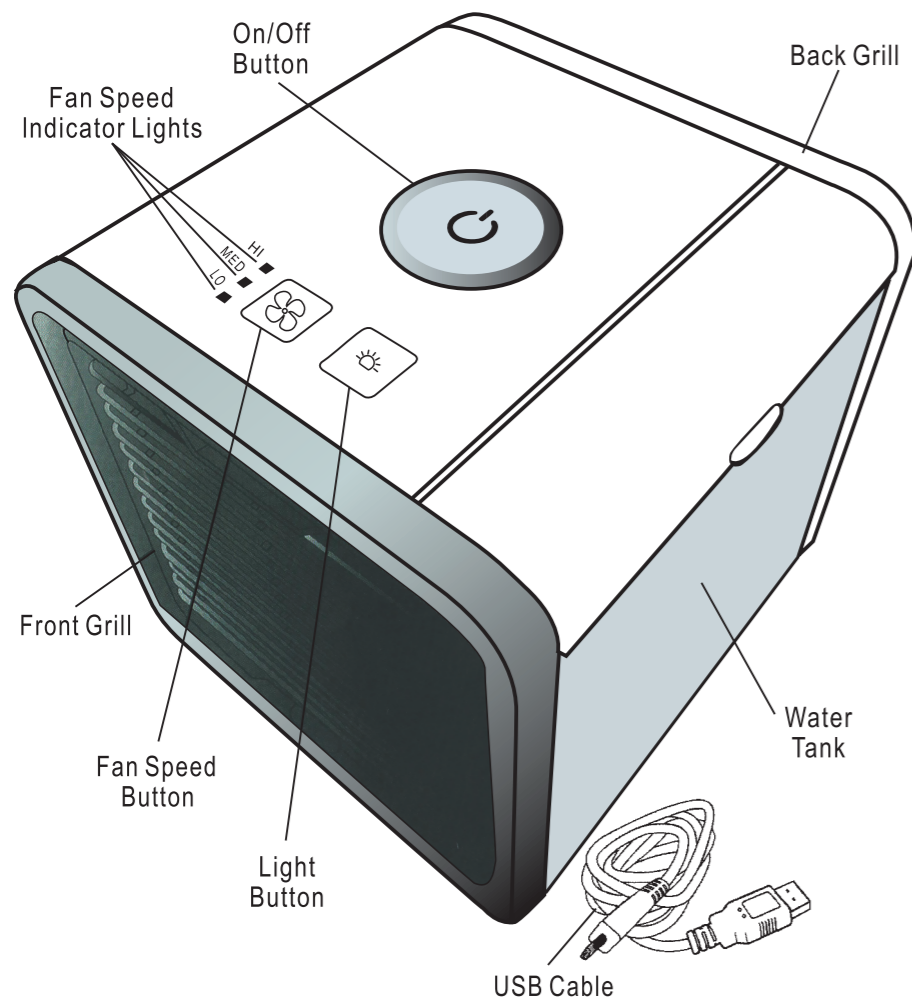

READ ENTIRE MANUAL BEFORE USE
SAVE THESE INSTRUCTIONS

TIPS:

- Place Blueprint Gadgets Mini Airconditioner on a raised surface such as a table, desk or counter top. This is the best way to cool your personal area faster.
- Let filter absorb water for at least 3 minutes after filling tank and before use. Doing so will get you the coolest air quicker.
- Try to stay within a few feet of Blueprint Gadgets Mini Airconditioner. You'll feel the most benefit when sitting directly in front.
- Blueprint Gadgets Mini Airconditioner will run for approximately 8 hours on a single fill on Low fan speed. Even if water tank is empty, filter is still damp and Mini AirConditioner is still cooling.

SETUP:

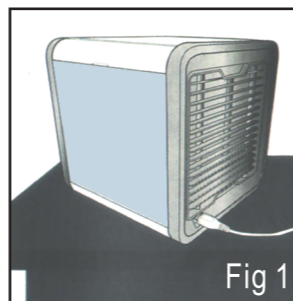


Fig 1

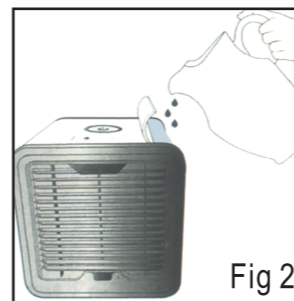






Fig 2

1. Place Blueprint Gadgets Mini Airconditioner on a flat surface. (See Fig 1)
2. Open the water tank door and fill with water (See Fig 2).

We recommend using a pitcher or measuring cup.

NOTE: You can plug the larger USB end into a computer to power Blueprint Gadgets Mini AirConditioner as well.

USAGE:

1. Press Power button to power on Blueprint Gadgets Mini Airconditioner. (See Fig 3)
2. Set the Fan speed by pressing  button. You can choose from Low, Medium, and High Mode. The indicator lights next to the button show you which speed Blueprint Gadgets Mini Airconditioner is currently running. (See Fig 4)
3. Choose your light color by pressing  button. You can choose between solid colors or a color-cycle mode. (See Fig 5)
COLOR ORDER: Blue, Red, White, Teal, Purple, Yellow, Green, Color Cycle
4. Choose your light brightness by pressing and holding the  button for 3 seconds - the tank will blink. Repeatedly press the  button to choose between High, Medium, and Low, then stop. The tank will blink after 3 seconds to confirm setting has been locked in.
5. When you're done, press the Power button again to turn off your Blueprint Gadgets Mini Airconditioner.

NOTE: We recommend running Blueprint Gadgets Mini Airconditioner on HIGH mode for at least 5 minutes before powering off to allow for drying.

LOW WATER:

When water level is low, water tank will blink 3 times every 60 seconds in AMBER color. When tank is refilled, light will function as normal.

MAINTENANCE:

We recommend cleaning the water tank and inside of the unit once weekly. Use only a non-abrasive cloth and mild dish soap when needed. For best continued results, we recommend changing the filter every 6 months. To purchase filters, visit www.blueprintgadgets.com or email support@blueprintgadgets.com

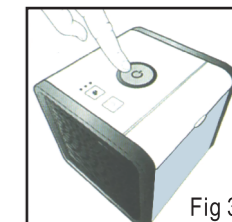


Fig 3

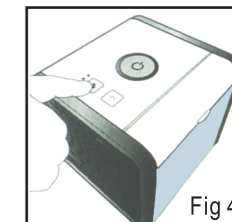


Fig 4

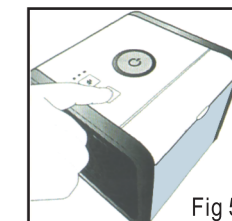








Fig 5

CHANGING THE FILTER:

The Water Filter should be changed every 6 months or when you feel Blueprint Gadgets Mini Airconditioner is not functioning as it should be. The Water tank will light up AMBER until filter is reset. To reset the filter, hold the  and  button for 3 seconds until tank is not AMBER anymore.

To purchase a replacement filter visit www.blueprintgadgets.com or email support@blueprintgadgets.com

1. Unplug Blueprint Gadgets Mini Airconditioner from the wall.
2. Gently press in release tab on bottom of front grill and pull grill down and away from unit. Place aside. (See Fig 6)
3. Grab onto filter and carefully slide out of unit completely. (See Fig 7)
4. Place new filter in Blueprint Gadgets Mini Airconditioner as shown by markings on filter. (See Fig 8)
5. Insert top tab of front grill into slot, and press release tab back into place. (See Fig 9)

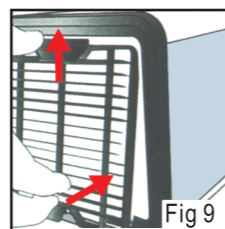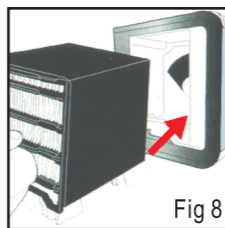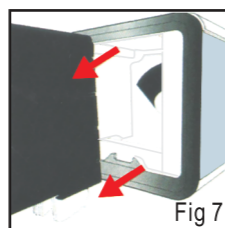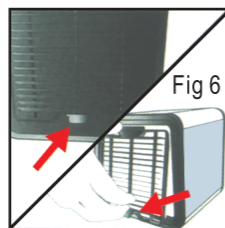

WARNINGS:

- Do not carry Blueprint Gadgets Mini Airconditioner when filled with water. Some water may remain in unit even if tank is empty.
- Caution: If using in a moist area or environment, take care not to get water on external areas of the product.
- If a leak or spill occurs on the surface of device, unplug Blueprint Gadgets Mini Airconditioner and let it dry for 24 hours. Then, use as normal.
- Do not place items on top of BluePrint Gadgets Mini Airconditioner.
- If Blueprint Gadgets Mini Airconditioner will not be used for an extended period of time, empty the water tank, turn unit on, and set to highest fan speed for at least 4 hours to dry out the filter and inside of your unit.
- Only use the original power adapter and cord supplied in package.
- Do not touch the power supply or power cord with wet hands.
- Unplug Blueprint Gadgets Mini Airconditioner when cleaning, removing / replacing filter, or moving the device.
- For best results, place Blueprint Gadgets Mini Airconditioner on a higher surface like a table or countertop.
- Do not place Blueprint Gadgets Mini Airconditioner near a heater or any electrical equipment.
- Do not place the device in passageways or high traffic areas where there is a possibility of tripping or knocking it over.
- Do not allow any foreign objects inside Blueprint Gadgets Mini Airconditioner.
- Do not place items on top Blueprint Gadgets Mini Airconditioner.
- Do not block the front and back grills of the device.
- Do not turn the device upside down.
- Do not submerge the Blueprint Gadgets Mini Airconditioner under water or other liquids.

WARNINGS (CONT):

- Do not place Blueprint Gadgets Mini Airconditioner near open flames or fire sources.
- People with limited physical, visual or mental abilities or lacking proper experience and/or knowledge should never use the device without supervision of those responsible for their safety or those capable of assistance in using the device.
- The device can be switched off completely only when disconnected from the power supply.
- The manufacturer does not bear any responsibility for any damage from failure to comply with this product guide.
- A replaceable water filter is designed specifically for this product. If your cartridge has been broken or damaged, you can purchase a replacement.

NOTES:

FOR HOUSEHOLD USE ONLY

Model Number: 17013 AC100~120V
DC 5V , 1.5~2.0A
1217.0101